

## Secondary Water Information

**Spring** – Pineview Water Systems usually turns on/charges the secondary water system mid/late April

1. **Owners** – need to make sure hose spigots/taps are closed (turned off). This will prevent flooding when Pineview turns the water main on.
2. **Pineview Water Systems** – will turn on main valves.
3. **HOA** – will turn on valve to each building.



**Fall** – Pineview Water Systems will turn water off late September to mid-October

1. **Pineview Water Systems** – will turn off main valves.
2. **HOA** – will turn the valve to each building off
3. **Owners** – need to open (turn on) hose spigots/taps and turn on sprinkler systems to allow the last of the water to drain. This will prevent pipes from freezing in the winter.

**Emergency Situations** – Secondary water can be shut off to each building by locating the green box. It looks like the image below and reads, “Irrigation Control Valve” on it.

